MAXIMAILER SERVICE MANUAL

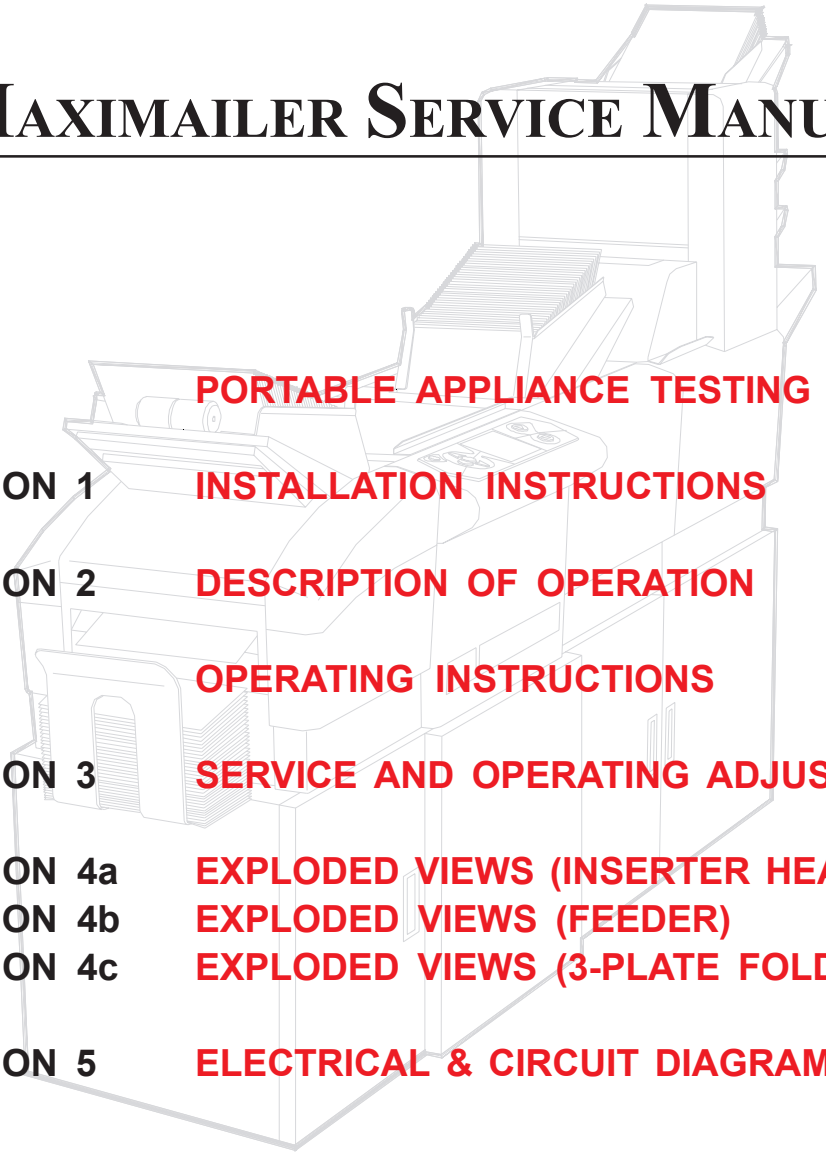

PORTABLE APPLIANCE TESTING

SECTION 1 INSTALLATION INSTRUCTIONS

SECTION 2 DESCRIPTION OF OPERATION

OPERATING INSTRUCTIONS

SECTION 3 SERVICE AND OPERATING ADJUSTMENTS

SECTION 4a EXPLODED VIEWS (INSERTER HEAD)
SECTION 4b EXPLODED VIEWS (FEEDER)
SECTION 4c EXPLODED VIEWS (3-PLATE FOLDER)

SECTION 5 ELECTRICAL & CIRCUIT DIAGRAMS